

# Document made available under the Patent Cooperation Treaty (PCT)

International application number: PCT/US04/043408

International filing date: 22 December 2004 (22.12.2004)

Document type: Certified copy of priority document

Document details: Country/Office: US  
Number: 60/537,773  
Filing date: 20 January 2004 (20.01.2004)

Date of receipt at the International Bureau: 31 January 2005 (31.01.2005)

Remark: Priority document submitted or transmitted to the International Bureau in compliance with Rule 17.1(a) or (b)



World Intellectual Property Organization (WIPO) - Geneva, Switzerland  
Organisation Mondiale de la Propriété Intellectuelle (OMPI) - Genève, Suisse

1275644

# THE UNITED STATES OF AMERICA

TO ALL TO WHOM THESE PRESENTS SHALL COME:

UNITED STATES DEPARTMENT OF COMMERCE

United States Patent and Trademark Office

*January 19, 2005*

THIS IS TO CERTIFY THAT ANNEXED HERETO IS A TRUE COPY FROM THE RECORDS OF THE UNITED STATES PATENT AND TRADEMARK OFFICE OF THOSE PAPERS OF THE BELOW IDENTIFIED PATENT APPLICATION THAT MET THE REQUIREMENTS TO BE GRANTED A FILING DATE.

APPLICATION NUMBER: 60/537,773

FILING DATE: *January 20, 2004*

RELATED PCT APPLICATION NUMBER: PCT/US04/43408



Certified by

Under Secretary of Commerce  
for Intellectual Property  
and Director of the United States  
Patent and Trademark Office



22912 U.S. PTO

012004

PTO/SB/16 (08-03)  
Approved for use through 07/31/2006. OMB 0651-0032  
U.S. Patent and Trademark Office; U.S. DEPARTMENT OF COMMERCE

Under the Paperwork Reduction Act of 1995, no persons are required to respond to a collection of information unless it displays a valid OMB control number.

# PROVISIONAL APPLICATION FOR PATENT COVER SHEET

This is a request for filing a PROVISIONAL APPLICATION FOR PATENT under 37 CFR 1.53(c).

Express Mail Label No. EV 411721398 US

31353 U.S. PTO  
60/537773

012004

INVENTOR(S)					
Given Name (first and middle [if any])		Family Name or Surname		Residence (City and either State or Foreign Country)	
JOHN J.		KEATING III		HOBOKEN, NJ	
<input checked="" type="checkbox"/> Additional inventors are being named on the <u>1</u> separately numbered sheets attached hereto					
TITLE OF THE INVENTION (500 characters max)					
IMAGE SCANNER REALTIME CALIBRATION OF STEREOGRAPHIC IMAGES (FIGURES 1-11)					
Direct all correspondence to: CORRESPONDENCE ADDRESS					
<input checked="" type="checkbox"/> Customer Number		27614			
OR					
<input checked="" type="checkbox"/> Firm or Individual Name		McCARTER & ENGLISH, LLP			
Address		FOUR GATEWAY CENTER			
Address		100 MULBERRY STREET			
City		NEWARK	State	NJ	ZIP 07102
Country		USA	Telephone	973-622-4444	Fax 973-624-7070
ENCLOSED APPLICATION PARTS (check all that apply)					
<input checked="" type="checkbox"/> Specification		Number of Pages		15	<input type="checkbox"/> CD(s), Number
<input type="checkbox"/> Drawing(s)		Number of Sheets		5	<input type="checkbox"/> Other (specify)
<input type="checkbox"/> Application Data Sheet. See 37 CFR 1.76					
METHOD OF PAYMENT OF FILING FEES FOR THIS PROVISIONAL APPLICATION FOR PATENT					
<input checked="" type="checkbox"/> Applicant claims small entity status. See 37 CFR 1.27.				FILING FEE AMOUNT (\$)	
<input type="checkbox"/> A check or money order is enclosed to cover the filing fees					
<input checked="" type="checkbox"/> The Director is hereby authorized to charge filing fees or credit any overpayment to Deposit Account Number		501402		\$80.00	
<input type="checkbox"/> Payment by credit card. Form PTO-2038 is attached.					
The invention was made by an agency of the United States Government or under a contract with an agency of the United States Government.					
<input checked="" type="checkbox"/> No.					
<input type="checkbox"/> Yes, the name of the U.S. Government agency and the Government contract number are: _____					

Respectfully submitted,

SIGNATURE

Date 01/20/04

TYPED or PRINTED NAME

ALLEN N. FRIEDMAN, ESQ.

TELEPHONE

973-639-6946

REGISTRATION NO.

25,973

(if appropriate)

Docket Number:

97084 New

## USE ONLY FOR FILING A PROVISIONAL APPLICATION FOR PATENT

This collection of information is required by 37 CFR 1.51. The information is required to obtain or retain a benefit by the public which is to file (and by the USPTO to process) an application. Confidentiality is governed by 35 U.S.C. 122 and 37 CFR 1.14. This collection is estimated to take 8 hours to complete, including gathering, preparing, and submitting the completed application to the USPTO. Time will vary depending upon the individual case. Any comments on the amount of time you require to complete this form and/or suggestions for reducing this burden, should be sent to the Chief Information Officer, U.S. Patent and Trademark Office, U.S. Department of Commerce, P.O. Box 1450, Alexandria, VA 22313-1450. DO NOT SEND FEES OR COMPLETED FORMS TO THIS ADDRESS. SEND TO: Mail Stop Provisional Application, Commissioner for Patents, Alexandria, VA 22313-1450.

If you need assistance in completing the form, call 1-800-PTO-9199 and select option 2.

**PROVISIONAL APPLICATION COVER SHEET**  
*Additional Page*

PTO/SB/16 (08-03)

Approved for use through 07/31/2006. OMB 0651-0032

U.S. Patent and Trademark Office; U.S. DEPARTMENT OF COMMERCE

Under the Paperwork Reduction Act of 1995, no persons are required to respond to a collection of information unless it displays a valid OMB control number.

Docket Number

**97084'New**

**INVENTOR(S)/APPLICANT(S)**

Given Name (first and middle [if any])

Family or Surname

Residence  
(City and either State or Foreign Country)

**RAINER**

**MARTINI**

**HOBOKEN, NJ**

Number   2   of   2  

**WARNING: Information on this form may become public. Credit card information should not be included on this form. Provide credit card information and authorization on PTO-2038.**

22912 U.S. PTO  
012004

PTO/SB/17 (10-03)

Approved for use through 07/31/2006. OMB 0651-0032  
U.S. Patent and Trademark Office; U.S. DEPARTMENT OF COMMERCE

Under the Paperwork Reduction Act of 1995, no persons are required to respond to a collection of information unless it displays a valid OMB control number.

# FEE TRANSMITTAL for FY 2004

Effective 10/01/2003. Patent fees are subject to annual revision.

☒ Applicant claims small entity status. See 37 CFR 1.27

TOTAL AMOUNT OF PAYMENT (\$ ) 80

## Complete if Known

Application Number	To be assigned
Filing Date	01/20/04
First Named Inventor	John J. Keating III
Examiner Name	To be assigned
Art Unit	To be assigned
Attorney Docket No.	97084/New

## METHOD OF PAYMENT (check all that apply)

☐ Check ☐ Credit card ☐ Money Order ☐ Other ☐ None

☒ Deposit Account:

Deposit Account Number: 501402  
Deposit Account Name:

The Director is authorized to: (check all that apply)

☒ Charge fee(s) indicated below ☒ Credit any overpayments

☒ Charge any additional fee(s) or any underpayment of fee(s)

☐ Charge fee(s) indicated below, except for the filing fee to the above-identified deposit account.

## FEE CALCULATION (continued)

### 3. ADDITIONAL FEES

Large Entity Small Entity

Fee Code	Fee (\$)	Fee Code	Fee (\$)	Fee Description	Fee Paid
1051	130	2051	65	Surcharge - late filing fee or oath	
1052	50	2052	25	Surcharge - late provisional filing fee or cover sheet	
1053	130	1053	130	Non-English specification	
1812	2,520	1812	2,520	For filing a request for ex parte reexamination	
1804	920*	1804	920*	Requesting publication of SIR prior to Examiner action	
1805	1,840*	1805	1,840*	Requesting publication of SIR after Examiner action	
1251	110	2251	55	Extension for reply within first month	
1252	420	2252	210	Extension for reply within second month	
1253	950	2253	475	Extension for reply within third month	
1254	1,480	2254	740	Extension for reply within fourth month	
1255	2,010	2255	1,005	Extension for reply within fifth month	
1401	330	2401	165	Notice of Appeal	
1402	330	2402	165	Filing a brief in support of an appeal	
1403	290	2403	145	Request for oral hearing	
1451	1,510	1451	1,510	Petition to institute a public use proceeding	
1452	110	2452	55	Petition to revive - unavoidable	
1453	1,330	2453	665	Petition to revive - unintentional	
1501	1,330	2501	665	Utility issue fee (or reissue)	
1502	480	2502	240	Design issue fee	
1503	640	2503	320	Plant issue fee	
1460	130	1460	130	Petitions to the Commissioner	
1807	50	1807	50	Processing fee under 37 CFR 1.17(q)	
1806	180	1806	180	Submission of Information Disclosure Stmt	
8021	40	8021	40	Recording each patent assignment per property (times number of properties)	
1809	770	2809	385	Filing a submission after final rejection (37 CFR 1.129(a))	
1810	770	2810	385	For each additional invention to be examined (37 CFR 1.129(b))	
1801	770	2801	385	Request for Continued Examination (RCE)	
1802	900	1802	900	Request for expedited examination of a design application	

Other fee (specify)

\*Reduced by Basic Filing Fee Paid

SUBTOTAL (3) (\$ ) 0

## FEE CALCULATION

### 1. BASIC FILING FEE

Large Entity Fee Code (\$)	Small Entity Fee Code (\$)	Fee Description	Fee Paid
1001 770	2001 385	Utility filing fee	
1002 340	2002 170	Design filing fee	
1003 530	2003 265	Plant filing fee	
1004 770	2004 385	Reissue filing fee	
1005 160	2005 80	Provisional filing fee	80
SUBTOTAL (1)			(\$ ) 80

### 2. EXTRA CLAIM FEES FOR UTILITY AND REISSUE

Total Claims	Extra Claims	Fee from below	Fee Paid
0	-20** = 0	X 0	= 0
0	-3** = 0	X 0	= 0
Multiple Dependent			= 0

Large Entity Fee Code (\$)	Small Entity Fee Code (\$)	Fee Description
1202 18	2202 9	Claims in excess of 20
1201 86	2201 43	Independent claims in excess of 3
1203 290	2203 145	Multiple dependent claim, if not paid
1204 86	2204 43	** Reissue independent claims over original patent
1205 18	2205 9	** Reissue claims in excess of 20 and over original patent

SUBTOTAL (2) (\$ ) 0

\*\*or number previously paid, if greater; For Reissues, see above

## SUBMITTED BY

(Complete (if applicable))

Name (Print/Type)	ALLEN N. FRIEDMAN, ESQ.	Registration No. (Attorney/Agent)	25,973	Telephone	973-639-6946
Signature	<i>Allen N. Friedman</i>	Date	01/20/04		

**WARNING: Information on this form may become public. Credit card information should not be included on this form. Provide credit card information and authorization on PTO-2038.**

This collection of information is required by 37 CFR 1.17 and 1.27. The information is required to obtain or retain a benefit by the public which is to file (and by the USPTO to process) an application. Confidentiality is governed by 35 U.S.C. 122 and 37 CFR 1.14. This collection is estimated to take 12 minutes to complete, including gathering, preparing, and submitting the completed application form to the USPTO. Time will vary depending upon the individual case. Any comments on the amount of time you require to complete this form and/or suggestions for reducing this burden, should be sent to the Chief Information Officer, U.S. Patent and Trademark Office, U.S. Department of Commerce, P.O. Box 1450, Alexandria, VA 22313-1450. DO NOT SEND FEES OR COMPLETED FORMS TO THIS ADDRESS. SEND TO: Commissioner for Patents, P.O. Box 1450, Alexandria, VA 22313-1450.

If you need assistance in completing the form, call 1-800-PTO-9199 and select option 2.

41723/2004-100000015-501402-60537773  
Sale Ref: 00000663 DMM 501402-60537773  
01 FC:2005 80.00 DA

## IN THE UNITED STATES PATENT AND TRADEMARK OFFICE

In re patent application of  
     JOHN J. KEATING III, ET AL.  
 Serial No.: TO BE ASSIGNED  
 Filed: FILED HEREWITH  
 For: IMAGE SCANNER REALTIME  
       CALIBRATION OF STEREOGRAPHIC  
       IMAGES (FIGURES 1-11)

X

**Mail Stop Prov. Patent Application**


Commissioner for Patents  
 P.O. Box 1450  
 Alexandria, VA 22313-1450

CERTIFICATE OF MAILING BY "EXPRESS MAIL"

Sir:

"Express Mail" Mailing Label Number: EV 411721398 USDate of Deposit: January 20, 2004

I hereby certify that this paper and/or fee is being deposited with the United States Postal Service "Express Mail Post Office to Addressee" service under 37 C.F.R. 1.10 on the date indicated above and is addressed to the Commissioner for Patents, Mail Stop Prov. Patent Application, P.O. Box 1450, Alexandria, VA 22313-1450.

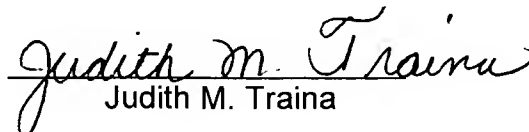  
 Judith M. Traina

**IN THE UNITED STATES PATENT AND TRADEMARK OFFICE**  
**PROVISIONAL APPLICATION**

**Inventors:** John J. Keating III, Rainer Martini

Both residing at 613 Hudson Street, Hoboken NJ 07030

**Title:** Image Scanner Realtime Calibration of Stereographic Images

1. **Background of the Invention:** In developing an invention disclosure for a 3D image scanner using ultra short pulses, it was realized that the calibration of the optical equipment, especially those configurations using multiple cameras is a very time consuming process and that the cost of three dimensional (3D) imaging equipment could be reduced if a more efficient calibration equipment were available. This invention employs a holographic projection to which multiple image recorders are aligned by physical alignment or by software post processing of the images produced by stereoscopic imaging capturing devices.
  
2. **Purposes and advantages of invention:** This invention provides apparatus and methods to calibrate stereoscopic optical recording equipment, in realtime, for both optical and electronic based optical recorders. Stereoscopic Equipment includes two or more optical recorders or a single optical recorder sequentially moved to different positions in space to acquire images of one or more desired objects. Calibration Equipment improves the quality of the stereoscopic images, for example, by more accurately combining information from multiple Optical Recording Devices. The herein described Calibration Equipment is both an apparatus to use with image capture equipment such as cameras and a method to compensate for the absolute and/or differential distortion within and across stereoscopic imaging equipment used together as a system.  
  
One potential use of the higher quality images obtained from calibration/compensation is to more accurately determine the distance to points on the stereoscopically recorded or viewed

object for uses which include the construction of three dimensional images of desired object. As this equipment is capable of providing calibration during normal stereoptic operation, without affecting the desired image, it is usable for continuous calibration, for example, when the stereoptic imaging devices are equipped with variable zoom lenses that exhibit differing optical properties as the zoom setting is changed or continuous calibration during normal operation when mechanically misalignment of equipment occurs in one or more of the optical paths to the Optical Recording Devices.

3. **Description:** The calibration of the three dimensional stereoscopic imaging equipment normally requires the calibration for all points in the target space occupied by the Desired Object to be captured as a three dimensional image, a time consuming process that is repeated for each change of the equipment in the optical path between the recorded objects and the image recording devices. To overcome this problem this disclosure describes an apparatus employing a holographic projection technique that creates a virtual object in the target space and therefore automates the calibration process. As this virtual image is viewed by the same lens system used for the stereoptic imaging systems, all static distortion will be taken into account. Changing the Holographic Calibration Pattern (image) is accomplished by recording multiple, superimposed holograms at different wavelength(s) or different positions on the Holographic Calibration Plate and then choosing a specific calibration pattern by illuminating the Holographic Calibration Plate by the specific wavelength(s) corresponding to the specific calibration pattern or viewing from a specific position. This apparatus and method allows for calibration at selectable and assignable positions in the Desired Object three dimensional target space. The hologram allows explicit calibration in the target space without the limitations of using real calibration objects that are moved through the image space as a calibration method. This holographic calibration system envisions the use of fixed holographic images or variable plate (e.g. using external inputs to phase modulate the holographic plate) holograms.



4. **Physical Arrangement:** In Figure 1, starting with the three dimensional physical object with normal background illumination, such as the three dimension pyramid shown in Figure 1, reflected light from the object travels toward the stereoscopic system, first passing through a Holographic Calibration Plate that is transparent to light in the desired range (e.g., normal visible light reflected from the Desired Object, which in Figure 1 is a pyramid, so as not to effect the recording of light of the Desired Wavelengths by the Optical Recorder(s). Let us refer to the light from the Desired Object whose image is desired( e.g. the pyramid in Figure 1) as the Desired Wavelengths. Let us refer the wavelengths produced the Holographic Calibration Plate, the Virtual Calibration Object as the Calibration Wavelengths. The Desired Wavelengths passing through the Holographic Calibration Plate [abcd] which will contain holographic encoded calibration information. This calibration information is in the Desired Wavelength region for applications in which the calibration information overlays the Desired Wavelength information so that both the Desired Object and the hologram be simultaneously observable without additional post processing. For applications in which the Desired Wavelengths alone are desired, the Calibration Wavelengths are stored or processed separately from the Desired Wavelength information. Calibration information and Desired information at overlapping wavelengths can also be temporally separated by pulsing the Calibration information for short times and synchronizing observation of the Calibration information.

The calibration patterns are encoded into the calibration hologram and made recordable and storable by the optical sensors by illuminating the hologram [abcd] in Figure 1 with an independent light source, S1 in Figure 1, which may be on either side of the hologram, thus ensuring the incorporation of the Holographic Calibration image into the camera field of view. Through movement of holographic plate or by changing of the illumination parameters (e.g. frequency of S1), alternative calibration information is generated for processing by the Optical Recorder.

Figure 1a is a variation of Figure 1 that uses a Mirror M1 to reflect the holographic image from Hologram M1, e.g. correction image, to the one or more Optical Recorders R1, R2, and R3. The mirror M1 is reflective at the calibration wavelengths and transparent at the desired wavelengths, thus images from the desired object, e.g. the pyramid in Figure 1a, pass directly to the Optical Recorders. This variation enables the use of wavelengths in light source S1 that included the desired wavelengths, as the desired wavelengths from S1 will pass directly through the Mirror M1 and are not reflected to the Optical Recorders.

In the case where the Holographic Calibration Wavelengths are different from the Desired Wavelengths (the normal case for this apparatus, although some applications may choose a Calibration Wavelength within the range of the Desired Wavelengths), the images reaching the Optical Recorders Device shown in Figure 1 contains both the Desired Object Wavelengths and Calibration Wavelengths.

The Optical Recorder equipment in this disclosure is of two types:

1. For Optical Recorder Device (apparatus), shown in Figure 2, the composite image of Desired and Calibration Wavelengths enters each Optical Recorder Device and is separated inside the Optical Recorder using additional wavelength selective filters and the Desired Wavelengths and the Calibration Wavelengths are processed separately within the Optical Recording Device. Selective separation of the optical wavelengths is of multiple subtypes. Type 1a uses optical filters to selectively separate the wavelengths. Type 1b uses a special optical to electron converts such as CCD arrays to separate the wavelengths, that is, the pixel array that provides optical to electronic conversion uses a planar arrangement of light sensitive devices whose arrangement in two dimensions alternates devices whose sensitivity peaks for Desired and Calibration Wavelengths. Type 1c splits the optical signal and optical

band pass and Bandstop filters select the Desired Wavelengths and the Calibration Wavelengths.

2. In Type 2 Optical Recorder equipment, shown in Figure 3, the calibration image wavelengths are generated only for special frames. Frames imply that the recording of the desired and calibration optical images is broken into discrete units of time during which subsequent samples of the Desired Wavelengths and Calibration Wavelengths are captured. Special frames store the Calibration Wavelengths. The special frames are of Type A which are stored or processed separately from the desired frames or Type B which are interspersed, at a periodic or non periodic rate, between the frames that contain the Desired Wavelengths. Figure 3 shows the equipment that utilizes Type 2 Optical Recorders. In Figure 3, Hologram Source S2 is pulsed on during the special frames and the optical or mechanical shutter OS1 is closed during special frames. This arrangement enables the recording of desired and calibration information without the wavelength separation described in Figure 1. The apparatus in Figure 3 more easily enables multiple calibration patterns based on Calibration Wavelengths above and below the Desired Wavelengths than the apparatus described above in Figure 1 in which additional wavelength selective filters are required.

The Type 2 apparatus permits a pulsed synchronization source in the field of view to provide pulsed time code information for synchronizing multiple cameras and/or to convey synchronized instructions to the multiple stereoptic cameras simultaneously, e.g. for special effects and other camera related functions. The combination of synchronization and holographic calibration/alignment across multiple cameras permits a more cost effective implementation of panoramic cameras such as those that are now achieved mechanically in CineMax systems and the simplified construction of panoramic three dimensional imaging devices.

The apparatus described above in Figures 1, 1a, 2 and 3 generates, in each Optical Recorder in the system, an image of the Desired Object and an image of the Virtual Calibration Object. For each mechanical configuration of the Optical Recorders, e.g. physical position or optical magnification setting, the calibration method is as follows:

1. Choose one Optical Recorder as the reference and assign a coordinate system. For an electronic image detector within the Optical Recorder assign the coordinates in parallel or normal to the pixel array in the camera or in alignment with the Holographic Calibration Plate pattern. For a non-electronic system, assign the coordinate system arbitrarily or in alignment with the holographic calibration pattern.
2. Assign the same coordinate system to all other Optical Recorders and measure the difference in the hologram calibration pattern in this coordinate system.
3. Utilize the differences measured on this coordinate system to calculate the calibration corrections for each Optical Recorder relative to the reference Optical Recorder.
4. Use the calibration corrections to compensate the desired images either mechanically or electronically.

When a single Optical Recorder is used sequentially in different spatial positions, the above procedure changes as follows: The first position becomes the reference and each subsequent position is treated in the calibration method as an additional Optical Recorder.

The Optical Recorder Device, shown in Figure 2, is capable of processing the image of a calibrated desired object in real time by translating, rotating and scaling the Desired Object Image based on the Calibration Image or storing the Calibration Images and Desired Object Images independently for delayed processing.

The Holographic Calibration Plate [abcd] in the Figures 1 and 3 need not be flat or continuously connected. A single Optical Recorder or multiple Optical Recorders may

use a spherical, cylindrical or arbitrarily shaped hologram, illuminated by Source S1 from either the inside or outside of the plate that surrounds or partially surrounds the Desired Object. As an example, Figure 4 shows a single Optical Recorder that moves around the outside of the cylindrical holographic calibration plate and generates successive images of the object that are post processed into a stereoptic image or into a three dimensional model of the object using algorithms for color and or edge matching. These stereoptic images of the object can be used to capture the 3 dimensional shape of the object from calculation using as input successive images of the Desired Object, and the spatial position of uniquely determined points on the object, e.g. points for a wire frame model, is calculated by triangulation. Color, texture and shading are then applied to the wire frame model from the captured images of the object.

Specific points on the objects are uniquely determined by highlight the desired points with points painted, points where an application pattern is projected on to the object using a calibration wavelength or with calibration points attached to the object which are painted with the calibration wavelengths. For example, to use this apparatus to measure a person for shoes or clothing, the person puts on a pair of socks or a tights that are painted with an application pattern, e.g. grid, in one or more calibration wavelengths. The image matching, for one or more cameras, is precise at the calibration grid points. Alternatively, a cosmetic surgeon may paint a selected pattern on the patient using paint in a calibration wavelength that is not visible to the human eye, or project a pattern on the patient using calibration wavelengths. This allows the surgeon to view normal visible images of the patient that have the selected pattern visible in post processing for either still or full motion images. Surgeons may also use these techniques in conjunction with thermal images when the desired wavelengths are properly selected, for radiological treatment application where heat is generated by radioactive treatment materials.

Optical Recorders which separate the desired and Calibration Wavelengths enable efficient extraction of the objects color and texture in addition to its three dimensional shape. Figure 5 shows the use of three Optical Recorders which can capture and triangulate the position in three dimensional space of a point P which is illuminated by a laser using a Calibration Wavelength, and thus invisible at Desired Wavelengths. This is an improvement over stereoptic color matching or edge matching, as the point P is precise. Furthermore, when combined with holographic calibration techniques, this apparatus improves the ease and accuracy of the three dimensional shape resolutions that is the position of point P can be inferred from its position relative to the Virtual Holographic Pattern. As the processing of the object color and texture information is independent of the spatial information this technique this apparatus captures both the objects shape and texture. Combining a holographic measurement grid with the point in illuminated at a Calibration Wavelength provides an apparatus that can measure an objects shape with a single Optical Recorder and provide increased speed and accuracy with multiple Optical Recorders.

The apparatus uses the Virtual Calibration Pattern to position the Laser Pointer, L1 at desired points on the Virtual Calibration Pattern. For example, if the Virtual Calibration Pattern is a grid on a plane that intersects the Desired Object and the laser generated point P is to be positioned on the surface of the object at all points at the grid intersection points nearest to the spatial positions where the virtual grid intersects the Desired Object, the following procedure is followed;

1. Choose a Virtual Calibration Pattern grid on a plane that is tangent to the nearest point of the Desired Object as measured from the Optical Recorder
2. Label the subset of virtual grid intersection points defined by those closest to where the virtual grid intersects the desired object in some numerical order.

3. Starting with the first numbered point and continuing to the last numbered point, position the laser point P at each numbered point successively and collect the position data using measurements to the calibration pattern. The apparatus simplifies the positioning process since the laser pointer wavelength is a Calibration Pattern Wavelength and the Pointer position P and the Virtual Calibration Pattern are simultaneously observable by the control system for the laser pointer and thus relative positioning corrections rather than absolute position Laser Pointing system are required.
4. Generate successive Virtual Calibration Pattern grids that intersect the Desired Object at greater distances from the Optical Recorder and repeat steps 2 and 3.
5. Continue until the Virtual Calibrating Pattern grids no longer intersect the Virtual Object

Figure 6 shows the combination of the holographic calibration with a Laser Ranging Measurement Device LRMD1. This apparatus combines a Laser Ranging Measurement Device with holographic three dimensional calibration using one or more Optical Recorders. The Laser Ranging Measurement Device LRMD1 provides accurate ranges to any point P on the surface of the Desired Object. The holographic calibration grid is used to provide accurate measurements of point P relative to optical images gathered from the Desired Object. By choosing a wavelength for the Laser Ranging Measurement Device LRMD1 that is a Calibration Wavelength, the point P illuminated by the LRMD1 is observable at the same time as the calibration pattern. The Laser Ranging Measurement Device is positioned using the procedure described with reference to Figure 5.

Figure 7 shows the use of a spherical calibration hologram that generates a calibration grid, e.g. a spherical coordinate grid, around one or more Optical Recording Devices. Apparatus in this configuration are well suited to applications requiring a complete field of

view. Multiple Optical Recorders can be placed within the calibration hologram to simultaneously cover all directions although this requires appropriate handling of overlapping fields of vision between adjacent Optical Recording Devices. The Calibration Hologram provides the mechanism to overcome the problems of adjacent Optical Recording Devices, including overlapping fields and conformal mapping from the planar segment of the optical recording device to a spherical frame of reference, and also provides a holographic pattern to provide the basis for conformal mapping of the Optical Recorder Outputs. The holographic calibration pattern provides boundaries between adjacent Optical Recording Devices and provides a uniform coordinate system across all devices that enables simplified calibration and alignment of conformal mapping across Optical Recording Devices, especially when the alignment between such devices are varying due to shock, vibration or acceleration. The Spherical Calibration Hologram, when combined with the laser ranging of Figure 6 provides accurate ranging to a targeted object.

This spherical holographic calibration configuration provides an apparatus to generate an input for a panoramic 360 degree view of remotely piloted vehicles subject to shock or acceleration. The apparatus enables realtime compensation for the two major problems of providing a panoramic 360 degree view for remotely piloted vehicles, that is, continuous alignment of multiple "fisheye" cameras as such cameras and related optics are subject to misalignment by shock or vibration, and the conformal mapping of multiple cameras into a 360 degree panoramic view. Furthermore the Calibration Wavelengths can be chosen to include wavelength used in collision avoidance systems and thus process such information jointly with the Optical Recorder calibration.

Figure 8 shows the use of non continuous, identical holographic calibration plates. If these plates were held mechanically parallel, then this configuration would effectively be the configuration of Figure 1. Misalignment of the calibration plates shifts the calibration pattern



up or down, left or right and/or forward or back. Thus the misalignment may be calculated from a set of reference points in the field of view. These points may be known calibration points, such as fixed points in the field of view, points projected by a laser whose wavelength is a Calibration Wavelength or some distinctive feature of the Desired Object such as an edge or point of distinct color point. The calibration algorithm is as follows:

1. Fix the separate holographic correction plates rigidly as closely as possible to the configuration of single fixed plate. For flat calibration plates this implies initially fixing the non-contiguous plates as parallel to each other as possible. For cylindrical/spherical segmented non-contiguous plates this implies initially fixing the plates rigidly as close the location which a contiguous cylindrical/spherical plate would occupy, and so forth for other shapes of holographic plates such as elliptical.
2. Determine a number of reference points in the vicinity of the Desired Object, if not on the Desired Object itself. Illuminated points on the Desired Object are a subset of these conditions. Additional fixed calibration points are generated by affixing reflecting and/or absorbing colors to the Desired Object with wavelengths in the calibration range, thus predetermining a fixed set of points for calibration.
3. For each reference point, determine the corresponding position on the Holographic Compensation Pattern and determine the misalignment of the hologram.
4. Determine the correction factors, for example, shift, rotation and scaling in an orthogonal coordinate system, as a function of position in the Desired Object in three Dimensional space, for each Optical Recording Device.
5. Applied the corrections for each Optical Recording Device to both the Holographic Calibration Patterns and the Desired Objects.

An alternative configuration of the apparatus is realizable, for applications that do not utilize the patterns of the Holographic Correction Plate. Specific reference points in the field of view

of the Desired Object are illuminated by a remote source or self illuminated with Calibration Wavelengths. These points are separated into Calibration Wavelengths by the apparatus and are used to provide calibration across the Optical Recorders and provide the calibration for compensation of the Desired Object. That is, in some circumstances, fixed calibration points near or on the desired object may replace the Holographic Calibration Plate.

For applications that do not utilize the patterns of the Holographic Calibration Plate, and where specific reference points can be illuminated by a remote source or self illuminated with Calibration Wavelengths the holographic plate is not a required part of the apparatus. Only the parts of the apparatus that separates the Desired Object wavelengths from Calibration Wavelengths is required. The calibration corrections for each Optical Recorder are calculated from the known points illuminated by the Calibration Wavelengths for each of the stereoptic Optical Recorders and calibration corrections are applied to each of the Desired Object in each Optical Recorder. This simplified calibration and compensation method is more likely to be employed only in wide angle images that uniformly capture many fixed calibration sources and where the fixed points are affixed to Desired Objects or placed near to stationary Desired Objects.

Figure 9 shows the addition of a Bandstop Filter to the apparatus of Figure 1, which prevents the illumination wavelength(s) of Hologram Source(s) from traveling from the apparatus to the region in the vicinity of the Desired Object. Such emanations from the apparatus are an undesirable circumstance when the apparatus is used in a security or a surveillance application.

Figure 10 shows an apparatus which generates virtual holograms with stereoptic microscopes. While the calibration of the two optical paths in a microscope is not important due to the excellent mechanical construction of microscopes, the calibration is more useful when multiple optical paths are employed and in addition, the ability to project a hologram is

both novel and useful. Potential uses include projecting grids to assist in counting specimens such as white blood cells on microscope slides or projecting three dimension grids to ascertain the locations of imperfections in diamonds as a means of grading and identification in the case of theft. The use of three dimensional holograms permits improved analysis as stereoptic microscope images are scaled, especially in the depth dimension.

When multiple holographic patterns are recorded on the Holographic Calibration Plate, these patterns are selectively accessed as the wavelength of the illumination of the Holographic Calibration Plate is varied or by movement of the plate. One problem with a grid is that unless the grid intersections are somehow labeled, errors in identifying a particular intersection are possible. This apparatus uses one Calibration Wavelength to record the grid and another Calibration Wavelength to symbolically identify the grid intersection, e.g. a bar code or alphanumeric sequence, and additional wavelengths with finer grid structures for more accurate determination of three dimensional spatial positioning. Combining the Holographic Calibration Plate with a symbolic identification such as a bar code decreases the time for real time recognition of grid intersections by commercial software.

Figure 11 shows the application of the apparatus to identification of a Desired Object, using a combination of unique object characteristics (e.g. finger prints), object geometry (e.g. facial or hand geometry) and/or object substructures (e.g. veins [viewable at visible wavelengths which are enhanced when viewed at and correlated with views at non-visible wavelengths] and an object viewed at other optical wavelengths [or through other optical recorders] such as fingerprints). The use of the herein described, holographic calibration techniques, enables the rapid calibration and maintenance of calibration of multiple optical recorders operating at different wavelengths. The use of multiple characteristics collected from multiple Optical Recorders for identification with holographic calibration or with mechanical and/or optical calibration for a stationary apparatus is a novel implementation of such apparatus. Such apparatus have high potential in banking where the underlying identification objectives are: 1.

minimize false acceptances and 2. minimize false rejections. The multi criteria identification system shown in Figure 11 has the potential to apply low false rejection criteria (e.g. hand geometry) to low risk activities (e.g. balance checks) and applying low false acceptance criteria (finger print, vein structure, etc.) criteria to high cost of failure activities (e.g. funds withdrawal).

The apparatus shown in Figure 11 is augmented by Light Source, L1, which, in addition to a light source, contains band pass and band stop filters to enhance selection of identification characteristics. For example, a band stop filter which only passes the Infrared Red wavelengths most useful for vein identification. Filters are selected in real time using Opto Acoustic filters for selective wavelengths that correspond to a particular eye or hair color corresponding to a specific Desired Object(s) for which an identification is desired. This example shows the use of the apparatus to minimize post processing by the use of band pass and band stop optical filters and/or continuous holographic calibration and correction, thus speeding up the matching of the Desired Object analyzed by the apparatus with objects for which a match is desired.

- 5. Ramifications:** This invention provides continuous (realtime) calibration of stereo optic information from still or moving objects. It improves the quality of the stereo optic images and permits the construction of more accurate three dimensional models from such images.

By changing the calibration patterns, for example by varying the hologram frequency when alternative holograms are recorded at different frequencies, several ranges and positions of the image field of view can be continuously recalibrated to compensate for variations in image system distortions (e.g. as the degree of telephoto magnification is changed).

Compared to standard calibration systems this technique offers many possibilities. In a standard calibration procedure a real object has to be brought in all possible positions to obtain a full


calibration – which is typically very time consuming and some positions are not accessible at all – and therefore cannot be calibrated. As consequence the calibration is time consuming. Any changes to the recording apparatus after the calibration will void this calibration and reduce the accuracy of the 3D information. With this new apparatus, the Virtual Holographic Calibration Pattern can be produced in any place in the field of view of the optical recording devices and the calibration is done quickly.

Compared with other calibration systems, the desired information and the calibration information are recorded through the same lens of each image recorder as the desired image is captured at the same time as the calibration image, and this enables real time calibration as post processing.


The Calibration Equipment and methodology continuously operate without interfering with the Optical Recording Devices.

Figures


Concept for Alignment and Calibration of Image Scanner with Multiple Optical Recorders using Holograms  
Figure 1

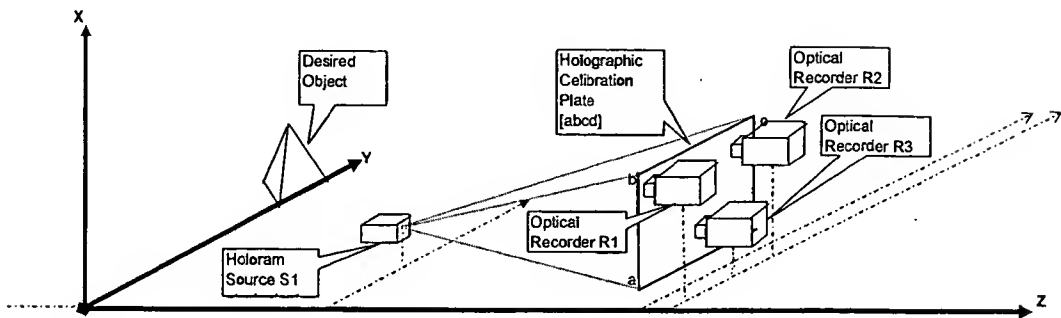


Alignment and Calibration of Image Scanner with Multiple Optical Recorders using Holograms and Mirror  
Figure 1a

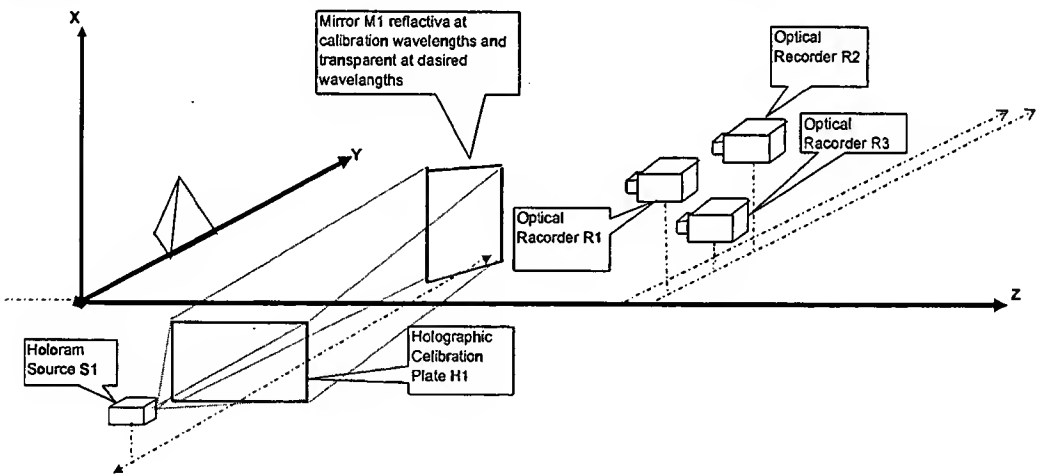


Type 1 Optical Recorder Device  
Figure 2

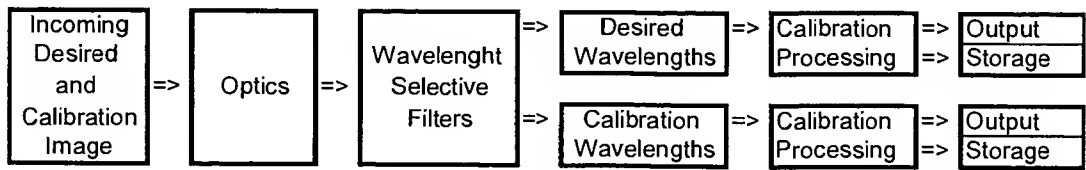


Type 2 Optical Recorder Device  
Figure 3

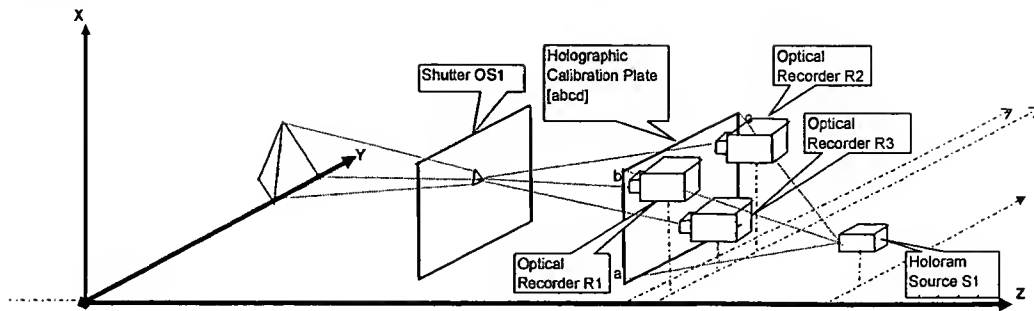


Cylindrical Calibration Holographic Plate  
Figure 4

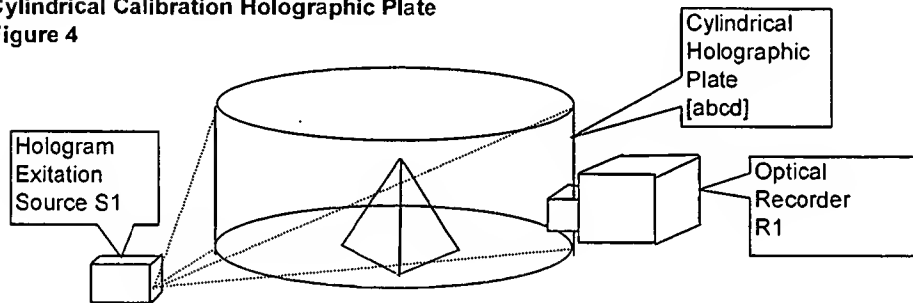


Sterographic 3 Dimensional Capture  
Figure 5

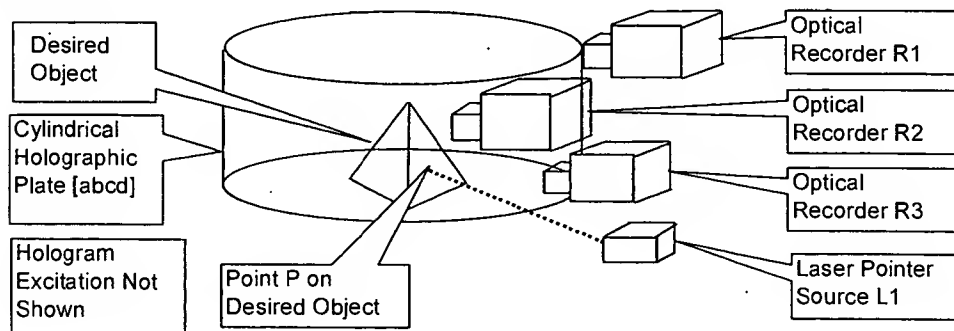

**St orographic 3 Dim nsion Extraction With Las r Ranging**  
**Figure 6**

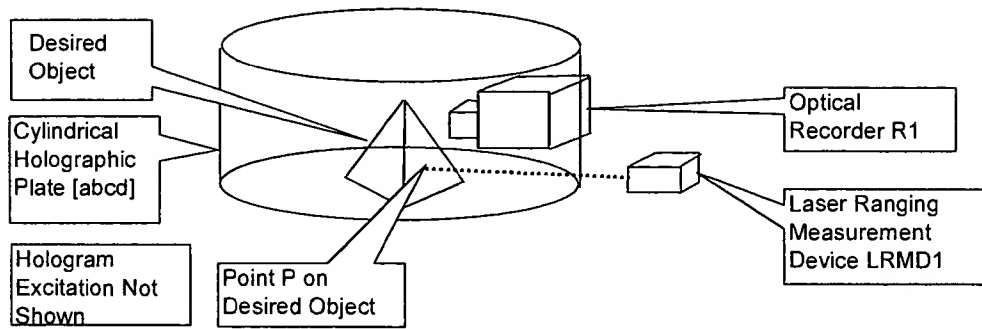


**Spherical Calibration Hologram**  
**Figure 7**

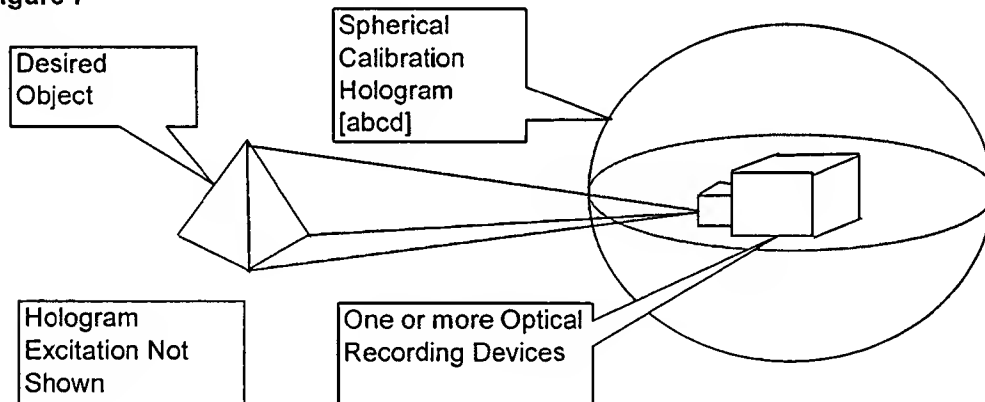





Non-contiguous holographic calibration plates  
Figure 8

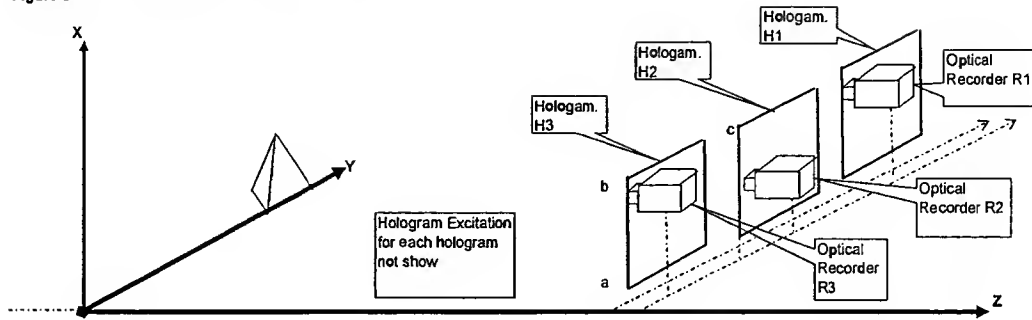

Concept for Alignment and Calibration of Image Scanner with Multiple Optical Recorders using Holograms for Security Applications  
Figure 9

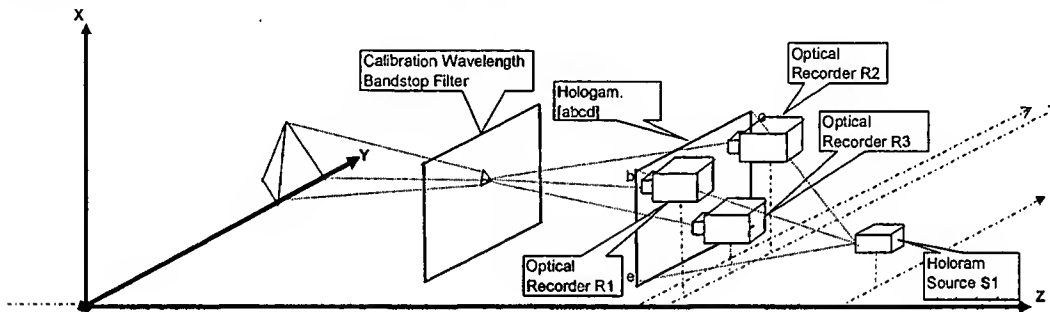

Projection of Measurement Grids for Mono and Stereoptic Microscopes  
Figure 10

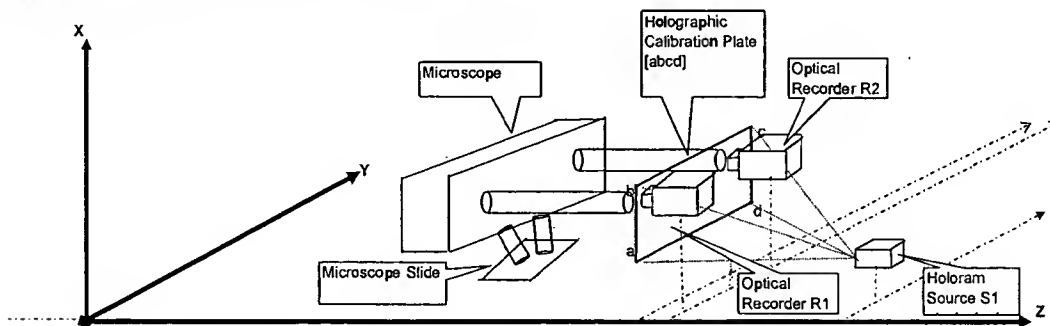

Identification of Desired Object Using a Combination of Unique Object Characteristics, Object Geometry and/or Object Substructure  
Figure 11

